



Operation guide  
Gebrauchsanleitung

## Fetch the earbuds



### ① Open charging box

Press the button of charging box, its cover will automatically pop up.

---

 
### ② Get earbuds out

Push left to take out the left earbud,  
Push right to take out the right earbud.

---



B

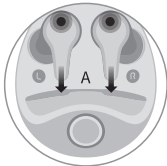

### ③ Put earbuds back into the charging box

 
A: Align the earphones into the contacts of the charging box and obliquely put them in.

B: Press the upper part of the earbuds, adjust it just right into the charging box.





---
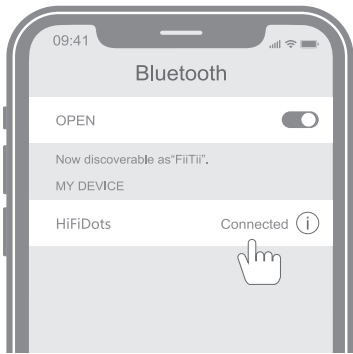
## Pairing

Open charging box, you will see two earbuds' LED light flashing, take earbuds out from charging box simultaneously, when the earbuds have completed the self-connection between themselves, seeing only 1 earbud's indicators flashing. Search HiFiDots on phone, tap to connect.




## Touch control

 	L	R
<ul style="list-style-type: none"><li>●● Double-tap</li><li>●● Double-tap</li><li>■ Press for 1 sec</li></ul>		
<ul style="list-style-type: none"><li>●●●●● Tap 5 times</li></ul>		OR
<ul style="list-style-type: none"><li>● Tap</li><li>●●● Triple-tap</li></ul>		
<ul style="list-style-type: none"><li>● Tap</li><li>●●● Triple-tap</li></ul>		

PS: The earbuds will automatically turn off if not connected to a device for 10 minutes.


## How to reset

Under charging status, continuously tap earbuds key for 5 times to set, earbuds led light will flash 5 times that means reset successfully.

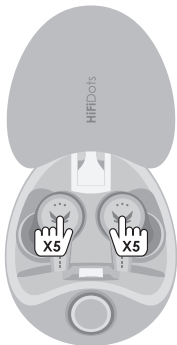

Notice: one earbud without sound or there is abnormal situation, please operate as above.

## Charging box Indicators

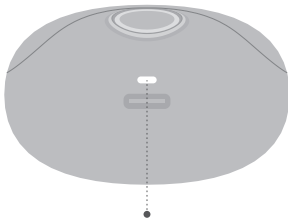 

Charging box LED Indicator

When earbuds inserts into the charging box,  
Power reminder:

- ☀ With battery 5-100%: LED on for 3S
- ☀ Battery low (less than 5%): LED flash 3S

Charging case Under charging status,  
Led indicator display:

- ☀ On charging: LED flash
- ☀ Fully charged: LED on

## Warning and recommendation

Please read this operation guide in details for product safety and correct usage.

- ① Loud sounds may cause hearing loss. Maintain a safely listening volume and duration. Consult your physician to understand the appropriate volume and duration to avoid hearing loss.
- ② Please use earbuds and their different functions under proper and safe environment to avoid safety issues.
- ③ For better and stable connection, please don't use the earbuds under heavy electromagnetic interference or signal interference environment.
- ④ Do not use this product while operating a vehicle or heavy machinery.
- ⑤ Keep out of reach of children.
- ⑥ Not rated for use in dishwasher, laundry machine, or other cleaning devices.
- ⑦ If ear pain or discomfort resulted from the use of this product, please stop using and it immediately consult a physician.
- ⑧ Do not store at temperatures below -15 degree C (5 degrees F) or above 55 degrees C (131 degrees F).
- ⑨ Please clean the charging touch point and speaker driver net regularly to avoid charging problem, diminishing audio caused by grime and earwax build up.

## FCC Compliance Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FCC ID: 2ASHS-HIFIPODS